

SXPad 1000P

User Manual

(V1.0)

Table of Contents

| | |
|---|----|
| Chapter 1 Product Introduction | 1 |
| 1.1 Front Components | 1 |
| 1.1.1 Keypad | 2 |
| 1.2 Back Components | 4 |
| 1.3 Bottom Components | 5 |
| Chapter 2 Basic Skills | 6 |
| 2.1 Turning on、Suspending、Turning Off、Resetting | 6 |
| 2.1.1 Turning on..... | 6 |
| 2.1.2 Suspending..... | 6 |
| 2.1.3 Turning off | 6 |
| 2.1.4 Resetting | 7 |
| 2.1.4.1 Performing a Hard Reset..... | 7 |
| 2.2 Pull the Stylus out and in | 7 |
| 2.3 Installing、Uninstalling the SIM、TF Card and Battery | 8 |
| 2.4 Charging the Battery | 8 |
| 2.5 Fitting the Hand Strap | 9 |
| Chapter 3 Connecting and Synchronizing with Your Computer | 10 |
| 3.1 Installing Connection Management Software | 10 |
| 3.1.1 Installing the Windows Mobile Device Center | 10 |
| 3.1.2 Installing ActiveSync | 10 |
| 3.2 Connecting and Synchronizing With Your Computer | 10 |
| 3.2.1 Managing the Connection and Synchronization by Using the Windows Mobile Device Center | 11 |
| 3.2.2 Managing the Connection and Synchronization by Using the ActiveSync..... | 14 |
| 3.2.3 Connecting With U Disk Mode..... | 16 |
| 3.2.4 OTG Connection | 18 |
| Chapter 4 Brief Description of the Operating System..... | 18 |
| 4.1 System Main Interface and the Start Menu..... | 18 |
| 4.2 Status Indicators..... | 19 |
| 4.2.1 Battery Status Indicators | 20 |
| 4.2.2 Speaker Status Indicators | 20 |
| 4.2.3 Network and Modem Status Indicators | 20 |
| 4.3 Pre-installed Programs | 21 |
| 4.4 Interacting With the Device | 22 |
| 4.5 Entering Information | 22 |
| 4.5.1 Using the On-screen Keyboard | 23 |
| 4.5.2 Drawing and Writing on the Screen Directly..... | 24 |
| 4.5.3 Recording a Message | 24 |
| 4.5.4 Camera (Select Models Only)..... | 25 |
| 4.5.4.1 Taking Pictures | 25 |
| 4.5.4.2 Recording Video Clips | 27 |
| 4.6 Personal Settings | 28 |

| | |
|--|----|
| 4.6.1 Buttons | 29 |
| 4.6.2 Home | 29 |
| 4.6.2.1 Appearance | 29 |
| 4.6.2.2 Items | 30 |
| 4.6.2.3 Set Date and time | 31 |
| 4.6.3 Screen Lock | 32 |
| 4.6.4 Set Passwords | 33 |
| 4.6.5 Power | 33 |
| 4.6.6 Sounds and Notifications | 34 |
| 4.6.7 Screen | 35 |
| 4.6.8 Backlight | 36 |
| 4.6.9 Align Screen | 37 |
| 4.7 GPRS Network Setting | 38 |
| 4.7.1 Add New GPRS Connecting | 38 |
| 4.8 Bluetooth Connecting | 40 |
| 4.9 Phone and Text Messages (Select Models Only) | 42 |
| 4.9.1 Phone | 42 |
| 4.9.1.1 About Your Phone | 42 |
| 4.9.1.2 Making a Call | 44 |
| 4.9.1.3 Responding to a Call | 46 |
| 4.9.1.4 Operations During a Call | 47 |
| 4.9.1.5 Using Call History | 49 |
| 4.9.1.6 Using Speed Dial | 50 |
| 4.9.1.7 Customizing Your Phone | 51 |
| 4.9.1.8 Additional Phone Operations | 53 |
| 4.9.2 Text Messages | 54 |
| 4.9.2.1 Reading Text Messages | 54 |
| 4.9.2.2 Composing and Sending a Text Message | 54 |
| 4.10 WIFI Connecting | 55 |
| 4.10.1 Switching On or Off the Wi-Fi Radio | 55 |
| 4.10.2 Connecting to a Wireless Network | 55 |
| Chapter 5 Software Operation | 57 |
| 5.1 Installing Programs | 57 |
| 5.2 Uninstalling Programs | 57 |
| Chapter 6 Troubleshooting and Maintenance | 58 |
| 6.1 Troubleshooting | 58 |
| 6.2 Resetting Your Device | 59 |
| 6.3 Caring for Your Device | 59 |
| Appendix 1: Specifications | 61 |

Chapter 1 Product Introduction

This chapter is mainly used to introduce the external components of 1000P. The front side is a LED screen, keypad and 3 indicators. The back side is a battery compartment. In the compartment, there are two slots, one for SIM card (Select models only) another for Micro SD card. The bottom of the receiver is some interfaces.

 
1.1 Front Components







| Ref | Component | Description |
|-----|----------------------------------|--|
| ① | Wireless communication indicator | Flashes in blue to indicate that the Bluetooth function is on. |
| | | Flashes in green to indicate that the Phone function is on. |
| ② | GPS Indicator | Flashes in green to indicate that the GPS function is switched on. |

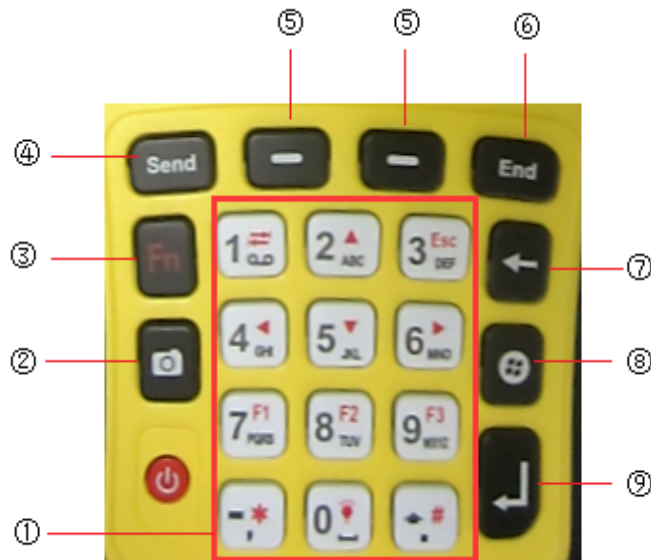
| | | |
|---|---------------------------|--|
| ③ | Charge/Power on Indicator | Flashes in red to indicate that your device is being turned on. |
| | | When battery charging, Flashes in green to indicate battery charging is in progress. |
| | | Flashes in amber to indicate that the battery is fully charged. |
| ④ | Touch Screen | Displays the output of your device and responds to your tapping. |
| ⑤ | Keypad | Includes keys for numbers and specific functions. |
| ⑥ | Microphone | Records voices. |
| | | Serves as the mouthpiece during a call. |
| ⑦ | Power Button | Turns on or off your device. |

1.1.1 Keypad





| Ref | Component | Description | |
|---|---|--|---|
| ① | Numeric Keys | Enter numbers (majorly for models with the phone function) | |
| | Alternative Function Keys | Provide functions as indicated by the red icons when Fn lock is on. | |
| | |  | Moves up, down, left and right within the screen or menu. |
| | |  | Goes to the next input field. |
| | | Esc | Backspaces over one character when in a text input field. |
|  | Increases the brightness level of the screen. It cycles to the lowest level after reaching the highest level. | | |
| ② | Camera Key | Starts the Camera program. | |
| | | Serves as the shutter release button if the Camera program is currently in use. | |
| ③ | Function Key | Switches on or off the alternative functions of the numeric keys. Fn lock is off by default. When it is switched on, the icon  shows in the navigation bar. | |
| ④ | Send Key | Dials or answers a call. | |
| ⑤ | Left/Right Soft Key | Performs the command shown on the bottom left or right corner of the screen. | |
| ⑥ | End Key | Ends or rejects a call (select models only). | |
| | | Returns to the Today screen from another program. | |

| | | |
|---|---|---|
| ⑦ |  | Backspaces over one character when in a text input field. |
| ⑧ | Start Key | Open the Start menu. |
| ⑨ | Action Key | Confirms your selection by pressing, similar to the Enter key on a keyboard. |
| ⑩ | Collect key | When you use software in 1000P to measure, and if you want to collect the data, you can press the collect key at the desired place, this local coordinate will be automatically recorded. |

1.2 Back Components



| Ref | Component | Description |
|-----|--------------------|--|
| ① | Camera Lens | Takes still pictures or records video clips. |
| ② | Speaker | Plays music, sounds and voices. |
| ③ | Hand Strap Holders | The hand strap attaches here. |
| ④ | Battery Cover | Inside is the battery. |

1.3 Bottom Components



| Ref | Component | Description |
|-----|-----------------------------------|---------------------------------------|
| ① | USB OTG (Host & Client) Connector | Connects to the USB cable. |
| ② | Hand Strap Holders | The hand strap attaches here. |
| ③ | Power Connector | Connects to the AC adapter. |
| ④ | Serial Connector | Provides D-sub 9 pins RS232 function. |

Chapter 2 Basic Skills

In this section, we highlight the basic operation of 1000P. It includes powering on/off, pull stylus out and in, installing/uninstalling SIM/TF card and battery, charging the battery and fitting the hand strap. All of these basic operations are simple and easy. But they are very important.

2.1 Turning on, Suspending, Turning Off, Resetting

2.1.1 Turning on

Press the Power Button and don not let go until the indicator color turns from red to green. It's about 33 seconds to turn on the product. Then the screen will appear the device information and Windows icon in order.

2.1.2 Suspending

Press the power button one second when the device is on, let go, then the device will be suspended and the first indicator from the right turns to green.

If the device is already in use, the device suspends halfway (black screen), to resume operation, press the power button. You will be back to where you left off.

CAUTION: The mobile phone indicator keeps on flashing when your device is suspended. Any incoming call will resume your device.

2.1.3 Turning off

If you don't want to use your device, press and hold the power button for at least 3 seconds until the device appears a dialog box as shown in figure 1. Then click "OK".



Figure 1

2.1.4 Resetting

If the device stops responding to the stylus or if it does not respond when you press any of the keypad buttons, you may need to reset it by performing a hard reset.

2.1.4.1 Performing a Hard Reset

press both **Send** and **End** buttons one minute at the same time, and then press the power button to turn on your device.

2.2 Pull the Stylus out and in

Users could use the stylus to navigate and select objects on the screen.

Please attach the stylus and your device with the tether. We suggest to pull the stylus out of the slot and extend it for ease of use. And store it in the slot when not in use.

2.3 Installing、 Uninstalling the SIM、 TF Card and Battery

1. Lift the latch handle of the battery cover and turn it counterclockwise to the unlock(vertical) position. Then, users could detach the cover from the device.

2. We can see two slots then, with the upper side one installing SIM card and the bottom side one installing TF card. To install the SIM card, push the SIM card holder right. With the SIM card's chip side facing down and put the card into the slot. Close the holder then. The TF card installation is similar to the SIM card installation. To remove the SIM card and TF card, push the holder and then take out the card.

3. To install the battery, attach the bottom side of the battery to the compartment at an angle and then lower the upper side to engage the connector. Attach the bottom side of the battery cover to the device at an angle, and then with the handle still in the unlock (vertical) position, fit the latch handle into place. Secure the latch by turning it clockwise to the lock (horizontal) position.

CAUTION: If we lower the upper side of the battery to engage the connector first and then attach the bottom side of the battery to the compartment, it's easy to cause damage to the battery.

2.4 Charging the Battery

The battery isn't charging when it has been sent out from factory. So we must charge the battery completely before using it for the first time. Charging lasts for two and a half hours, the charger has overcharge protection function.

CAUTION: For optimal performance of the lithium battery, please take note of the following:

Use the included AC adapter and charger only.

There is no need to fully discharge the battery before charging. You can charge the battery before it is discharged.

Do not charge the battery where the temperature is high(higher than 50°C) or low(less than 0°C).

If you will not use the product for a long period of time, be sure to fully charge the battery at least once every two weeks, over discharge of the battery can affect the charging performance.

It has risk of explosion if battery replaced by an incorrect type. Make sure to follow the instructions to deal with the dead batteries.

2.5 Fitting the Hand Strap

Align the upper hand strap bracket with the two mounting holes behind the device and then use a screwdriver to tighten the screws. The other side is fixed to the hand strap holders at the bottom of the device. We can see it after the installation is completed.



Figure 2

Chapter 3 Connecting and Synchronizing with Your Computer

3.1 Installing Connection Management Software

To install software onto a device powered by the Windows Mobile operating system or to copy files between your device and a PC, you must connect the device to a PC. If the computer is running the following software:

- Windows 7 or Windows Vista operating system, use the Windows Mobile Device Center (WMDC) to manage the connection.
- Windows XP or 2000 operating system, use ActiveSync to manage the connection.

CAUTION: You must install the Windows Mobile Device Center or ActiveSync technology onto the computer before you connect the handheld.

3.1.1 Installing the Windows Mobile Device Center

The Windows 7 and the Windows Vista operating system include a basic connectivity driver for devices powered by a Windows Mobile operating system. This driver allows you to transfer files from the device to an office computer.

To install software onto a device powered by a Windows Mobile operating system, you must install Windows Mobile Device Center 6.5 onto a PC.

3.1.2 Installing ActiveSync

Search the ActiveSync 4.5 version from the website to download. Alternatively, visit <http://www.microsoft.com/en-us/download/details.aspx?id=15> to download the latest version from the Microsoft website.

3.2 Connecting and Synchronizing With Your Computer

To connect the device to a PC:

1. Make sure that the device and the PC are switched on.
2. Make sure you have installed the appropriate connection management software onto the PC.
3. To form a connection, do one of the following:
 - ① Use the device's integrated Bluetooth radio to establish a wireless serial link to a Bluetooth-enabled computer.
 - ② Use a USB connection: Plug the USB cable into the USB port on the device. Plug the other end of the USB cable into a USB port on the PC.

3.2.1 Managing the Connection and Synchronization by Using the Windows Mobile Device Center

Connect the device to the PC. It will appear a dialog box shown as in figure 3 if the device successfully connects to the PC.

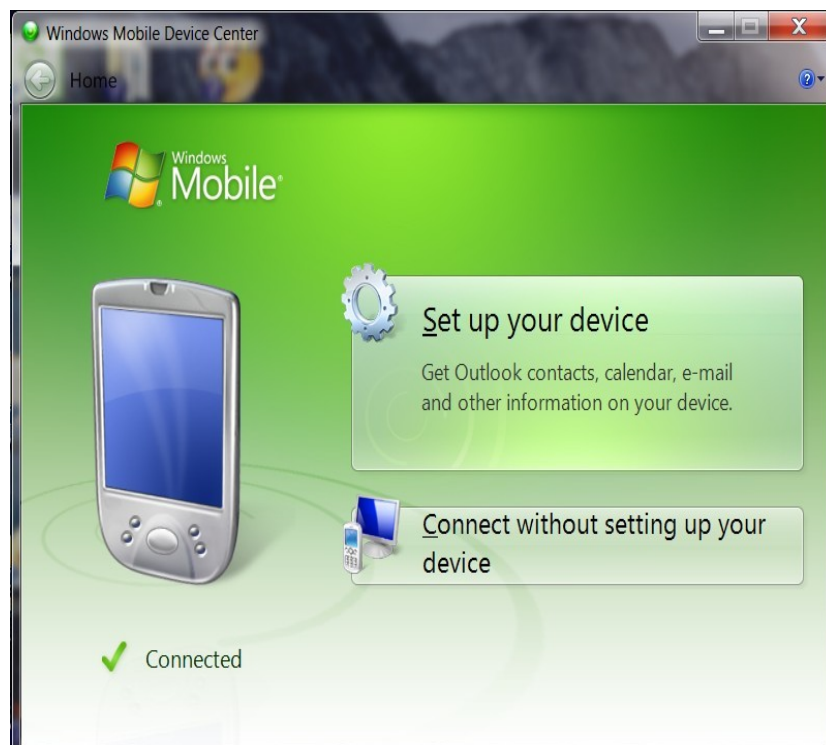 


Figure 3

CAUTION: If the device doesn't establish a connection automatically, check

whether the connection is enabled in the Windows Mobile Device Center software and on the device.

Click “connect without setting up your device”, then you will see a page shown as in figure 4.



Figure 4

Click “File Management”. Appear a drop-down menu as shown in figure 5.



Figure 5

Click “Browse the contents of your device”, then you will see a page as shown in figure 6.

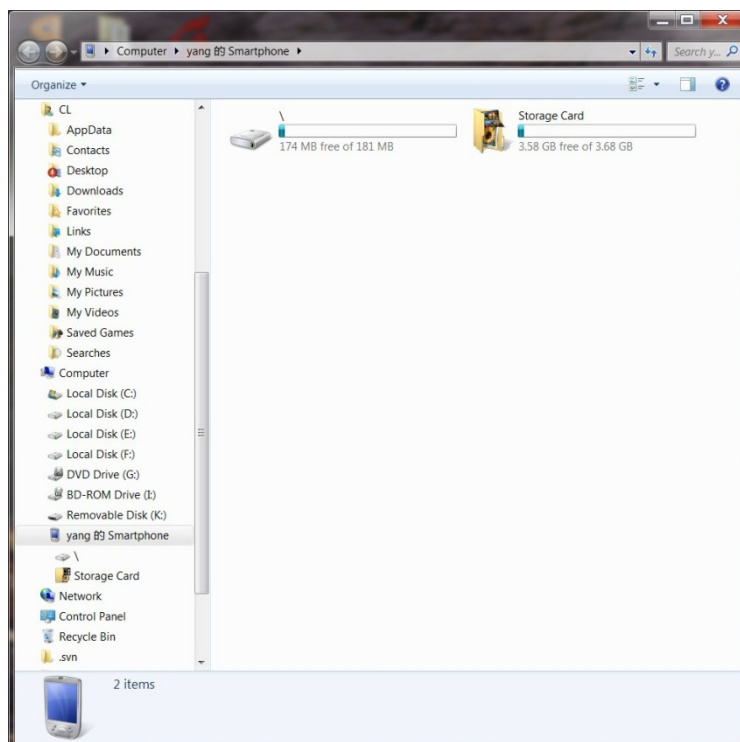 


Figure 6

Open the data of the corresponding letter of the disk, select the files in the

desired path that you want to realize uploading and downloading.

3.2.2 Managing the Connection and Synchronization by Using the ActiveSync

Connect your device and a computer, it will appear the dialog box shown as “Microsoft Outlook”, tap “x” on the upper-right corner.

Tap “x” on the upper-right corner when it appears the dialog box shown as in figure 7.



Figure 7

When the Welcome to the Pocket PC sync setup wizard shown as in figure 8 appears, tap “x” on the upper-right corner.



Figure 8

Enter the synchronization interface shown as in figure 9, tap “Explore”.

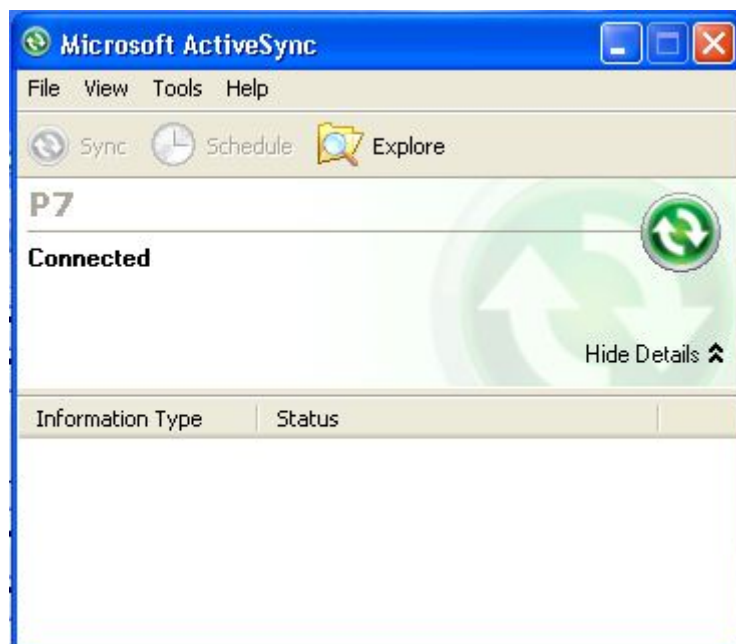 


Figure 9

You will enter the Mobile device interface shown as in figure 10. Tap “My Windows Mobile-Based Device” to enter the letter of disk interface, then you can

import and export data.

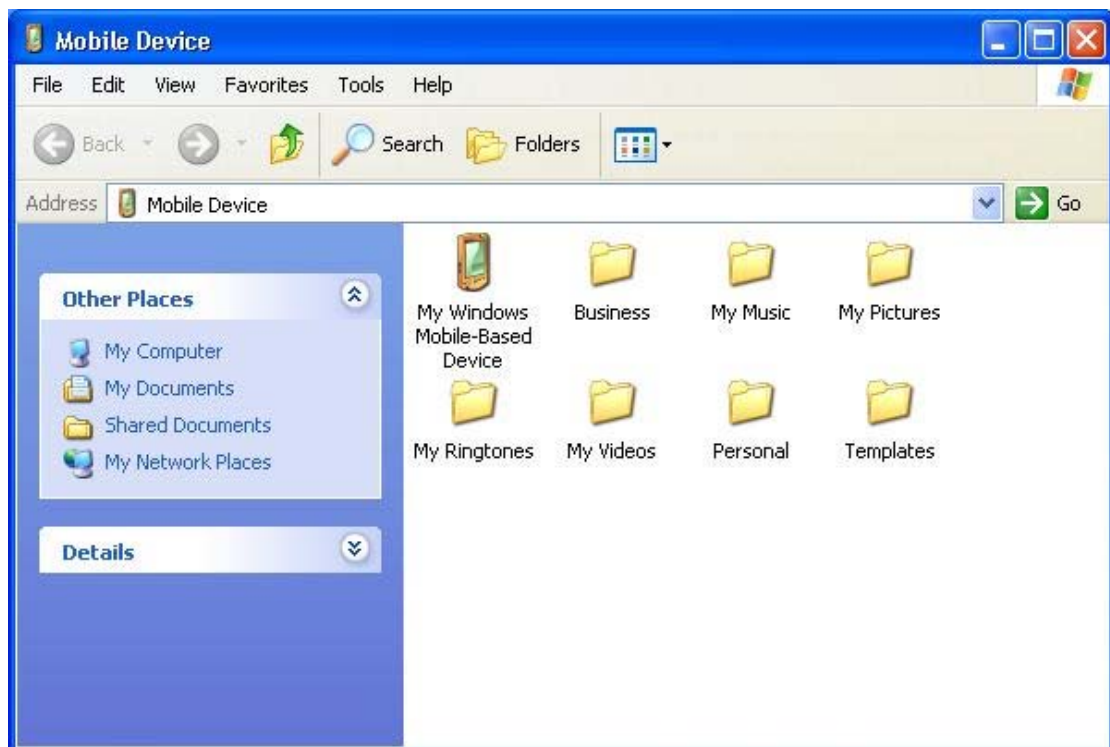 


Figure 10

3.2.3 Connecting With U Disk Mode

When you have established connection between your device and your computer, the U disk mode will complete before ActiveSync mode. Open "My computer" and then you can see the letter of "Mobile Device" shown as in figure 11.

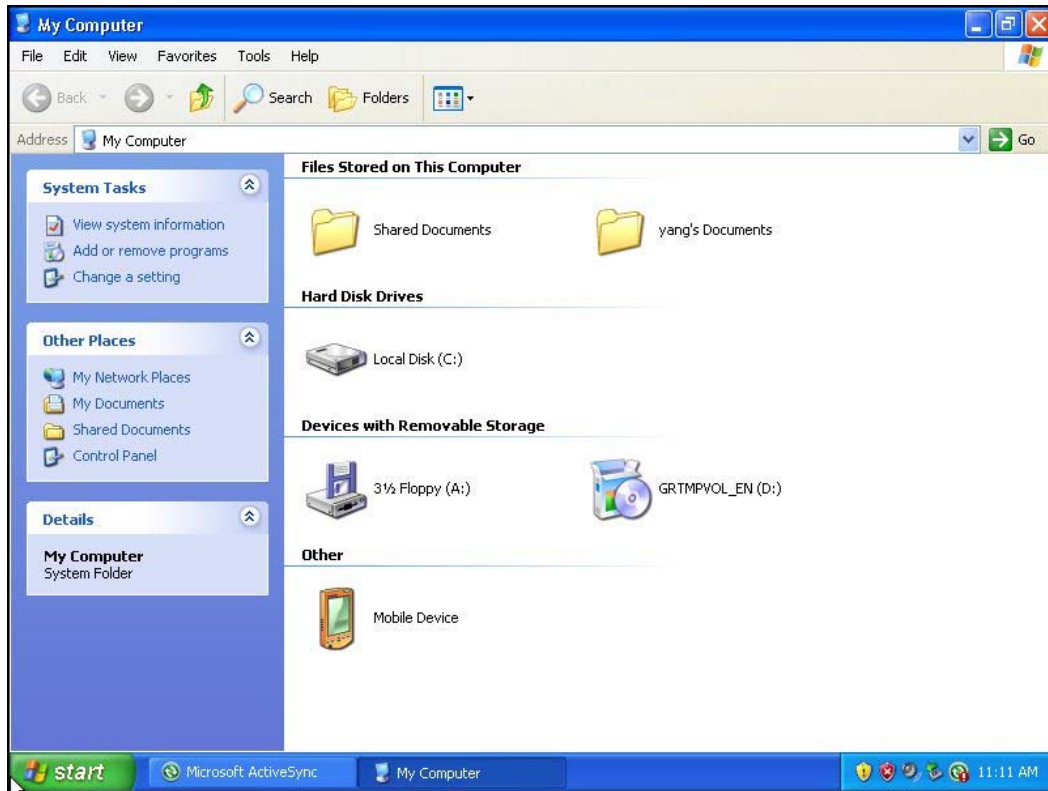 


Figure 11

Open “Mobile Device”, you will enter the same operation interface as the ActiveSync mode shown as in figure 12. The later procedure is the same as the ActiveSync.

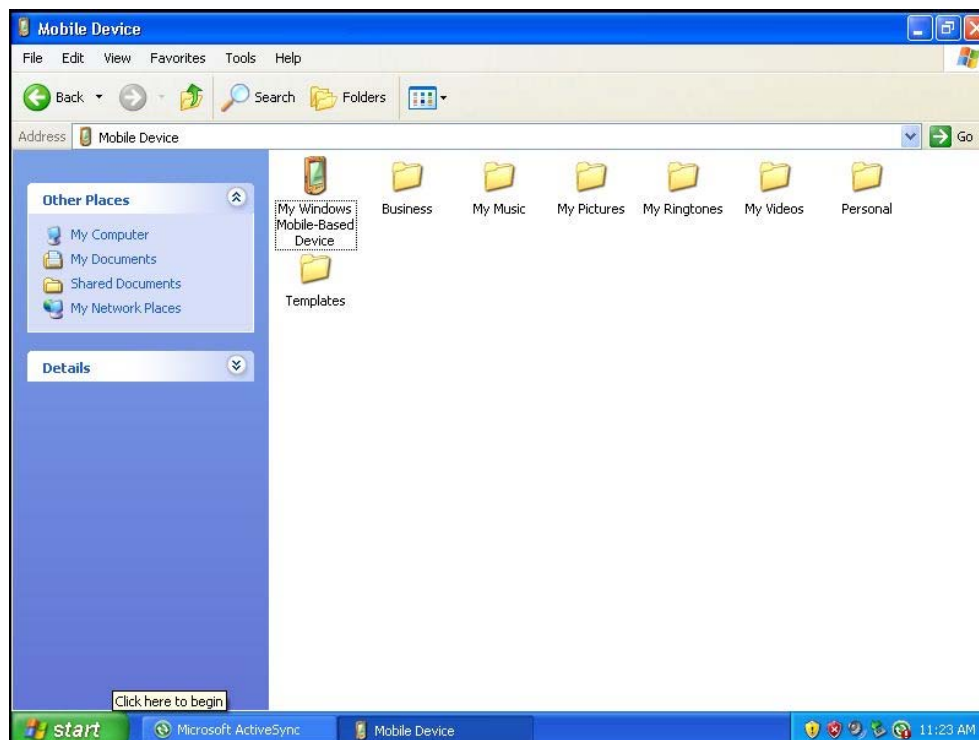 


Figure 12

CAUTION: please ensure the device has enough power during synchronously transmitting data.

3.2.4 OTG Connection

Use OTG function connecting cord to connect the U disk or other USB mobile storage devices to USB connector on the bottom of the device. Open File Explorer, tap the pull-down box of my device, then you can see the letter of “Hard Disk”. Then you can transform data between the hard disk and the device.

Chapter 4 Brief Description of the Operating System

4.1 System Main Interface and the Start Menu

Turn on the device by press the battery button for some time, then we can see the home screen shown as figure 13.



Figure 13


Click the Windows icon  in the lower left corner of the home screen. We can see the start menu shown as figure 14 where we can conduct basic settings and start relevant procedures.



Figure 14

Press and hold the program icon until the icon bounce shown as figure 15, then drag the icon to the location where you want shown as figure 16.



Figure 15







Figure 16

4.2 Status Indicators

The status indicators appear in the title bar at the top of the screen.



4.2.1 Battery Status Indicators

The battery status icon on the title bar of the Home screen or the Start screen shows the status of the battery charge.

| Icon | Description |
|---|--|
|  | Battery has full charge |
|  | Battery has high charge |
|  | Battery has medium charge |
|  | Battery has low charge |
|  | Battery has very low charge(20% or less) |
|  | Battery charging/use external charge |







4.2.2 Speaker Status Indicators

The battery status icon on the title bar of the Home screen or the Start screen shows the status of the speaker.

| Icon | Description |
|---|----------------|
|  | Speaker is on |
|  | Speaker is off |


 







4.2.3 Network and Modem Status Indicators






The network and modem status icons on the title bar of the Home screen or the Start screen show the status of each radio.

| Icon | Description |
|---|--|
|  | Connected to ActiveSync or the Windows Mobile Device Center(WMDC)on a computer |
| | Connected to Bluetooth-enabled computer |
|  | Wi-Fi radio is on |
|  | Maximum cellular modem signal strength |
|  | Cellular modem is turned off |
|  | No cellular service |
|  | No SIM card |

4.3 Pre-installed Programs

Programs that are pre-installed on the device are as follows:

| Program | Function |
|---|---|
|  ActiveSync | Synchronize information between the device and a computer. |
|  Alarms | Set alarms. |
|  Text | Send, receive and organize text messages. |
|  E-mail | Compose, send and receive E-mail messages. |
|  Internet Explorer | Brows the world wide web. |
|  Calendar | Keep track of appointments and arrange meetings. |
|  Contacts | Keep track of your friends and colleagues. |
|  Windows Live | Access Windows Live services, including: E-mail, instant messenger and Internet search. |
|  Windows | Play Windows Media or MP3 audio and video files. |

| | |
|--|--|
| Media | |
|  Notes | Create handwritten, typed or recorded notes. |
|  Calculator | Perform basic arithmetic functions. |
|  Tasks | Keep track of your tasks. |
|  Pictures & Videos | Take, view, and edit pictures, or record and launch video clips. |
|  Search Phone | Search for a file or item stored on the device |

4.4 Interacting With the Device

To interact with the handheld use the stylus or your finger to tap items on the touch screen or to scroll up or down.


| Action | Definition |
|----------------|---|
| Tap | Touch the screen once to open the items and select options. |
| Press and hold | Press and hold an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action you want to perform. |
| Drag | Hold the stylus on the screen and drag across the screen to select text and images. Drag in a list to select multiple items. |
| Flick | Flick the stylus or your finger to scroll a page or a list up and down. |

4.5 Entering Information

Depending on the program you are using, you can enter information in several ways, as described below:

| Input method | Description |
|---------------|---|
| Synchronizing | Use Microsoft connection management software to exchange information between the device and a PC. |
| Typing | Use the Keyboard input panel to enter typed text by clicking keys on the on- screen keyboard. |
| Drawing | Use the stylus (like using a pen) to draw (or write) directly on the screen. |
| Recording | Create a stand-alone recording or embed a recording into a note. |

4.5.1 Using the On-screen Keyboard

Tap the input panel button  to show the input panel as shown in figure 17.

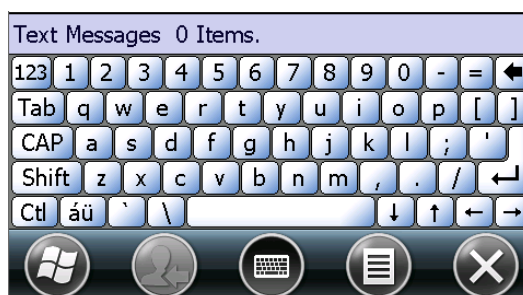 



Figure 17



Figure 18


You have two methods to input message: Geo keypad and keyboard.

When you use the keyboard, your device anticipates the word you are typing and displays it above the Input panel. When you tap the displayed word, it is inserted into your text at the insertion point. The more you use your device, the more words it learns to anticipate.

To hide the input panel, tap the input panel button  again.

4.5.2 Drawing and Writing on the Screen Directly

In some applications, for example Notes, you can directly draw (or write) on the screen using the stylus.

Tap  / Notes shown as in figure 19, tap menu, select Draw, and then you can write or draw directly on the screen.

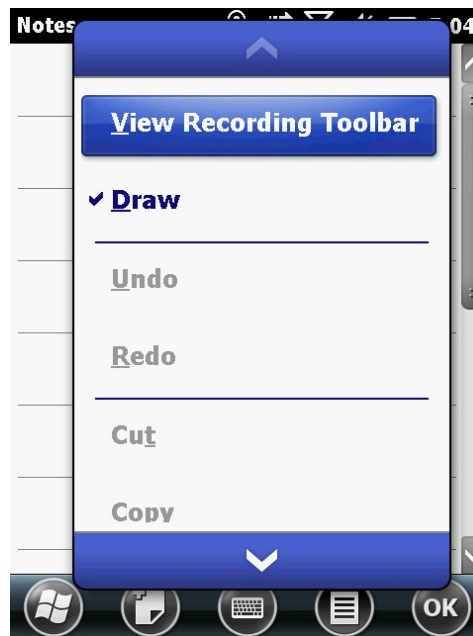 







Figure 19

4.5.3 Recording a Message

Tap  / Notes, then tap  To create a stand-alone recording, in the screen displaying the list of Notes, tap the Record button  to begin recording. To add a recording to a Note, create or open a Note and then tap the Record button  to begin recording.

When you finish recording, tap the Stop button . If you are creating a

stand-alone recording, an icon will appear in the Note list. If you are recording in an open Note, an icon will appear in the Note. Tap “OK” to return to the Note list.

To play a recording, tap the recording in the Note list or open the Note and then tap the icon  in the Note.

4.5.4 Camera (Select Models Only)

Camera function built-in allows you to take photo or video in real time.

4.5.4.1 Taking Pictures

1. To start the program, press the  key on your device or tap  / Pictures & Videos/ Camera.

The Camera screen appears shown as in figure 20. Below the display area are indicators of the current status.



Figure 20


2. For camera controls, tap “Menu” shown as in figure 21.



Figure 21

| Menu Items | Descriptions |
|-------------|--|
| Mode | Three choices: 1. Normal 2. Burst- Continuous shooting of 5 pictures 3.Timer-5 second countdown before shooting |
| Resolution | Three choices: 1. 640×480 y v 12 2. 1024×768 y v 2 3. 2048×1536 y v 12 |
| Full Screen | Full screen on or off. |
| Options | Overall settings to the Camera program. |

CAUTION: default, the display area blanks out and shows the word “standby” when the camera has been idle for one minute. To resume, tap the screen.



3. Press the  key to take the picture.

4. The result shows on the screen if the picture was taken in Normal or Timer

mode. At this time, you can tap “Menu” to perform a desired task to the current picture. Tap “Camera” or “ok” to go back to the Camera screen.

5. The picture is saved to the predefined storage location (as long as you didn't delete it in the previous step).

4.5.4.2 Recording Video Clips

1. To start the program, press the  key on your device or tap / Pictures & Videos/ Camera.

2. Tap Menu/ Video to switch to the video mode shown as in figure 22. Below the display area are indicators of the current status.



Figure 22

3. For recording controls, tap “Menu” shown as in figure 23.

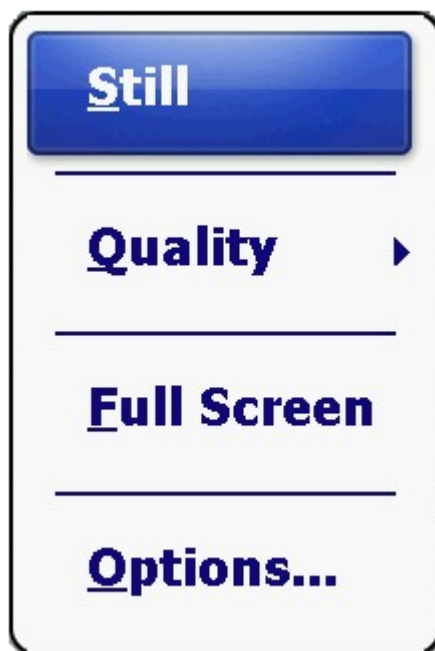 




Figure 23

CAUTION: In default mode, the display area blanks out and shows the word “standby” when the camera has been idle for one minute. If you want to resume, tap the screen.

4. Press the  key to start recording. If needed, you can tap “Pause” to temporarily pause the recording and then tap “Resume” to continue.

5. To stop, press the  key or tap “Stop”. Or, the recording will automatically stop when the length reaches the pre-defined maximum value (30 seconds by default).


6. The video clip is saved to the predefined storage location. To view the video clip, tap “Thumbnails” and choose the video you want to view.

4.6 Personal Settings

Use the controls in the Settings area to customize the device. The following examples describe controls that are available.

4.6.1 Buttons

Use the Buttons control under Personal settings to assign the action you want to be performed when you press the left or right application key. By default, these keys perform the same action as the left and right tiles in the tile bar.

Tap  / Settings/ Personal/ Buttons, open the button interface shown as in figure 24.

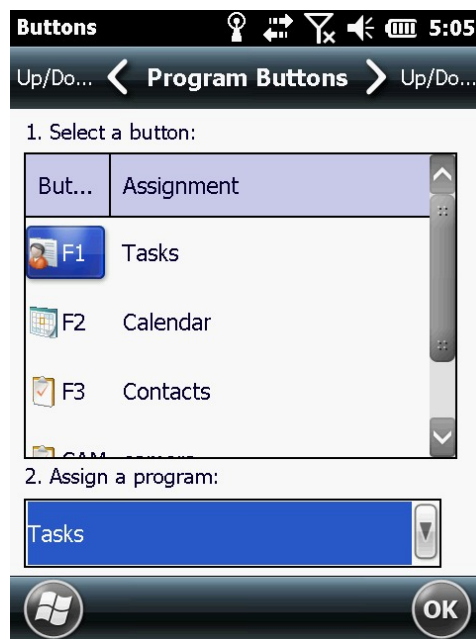 


Figure 24


Select a button, select the action you want to occur when you press the button or tap the soft key from the assign a program drop-down list, and then tap “OK”.

4.6.2 Home

Use the Home settings to change the display theme that controls the appearance of the Home screen and to customize how items appear on the Home screen.

4.6.2.1 Appearance

You can use a theme to customize the background picture on the Home screen, the color of the title and tile bars, menus and messages.

Tap  Settings/ Home/ Appearance, you can see the interface shown as in figure 25.

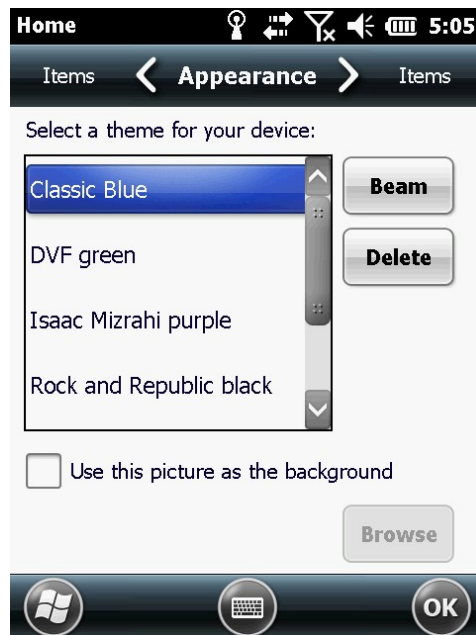 



Figure 25

To use a predefined theme select it from the list. Select “Use this picture as the background” check box, and then tap “Browse” to search for a file on the device. Tap “OK” to complete the theme picture settings.

4.6.2.2 Items

You can customize which items appear on the Home screen and the order in which they appear by the item tab.

Tap  Settings/ Home/ Items, you can see the interface shown as in figure 26.

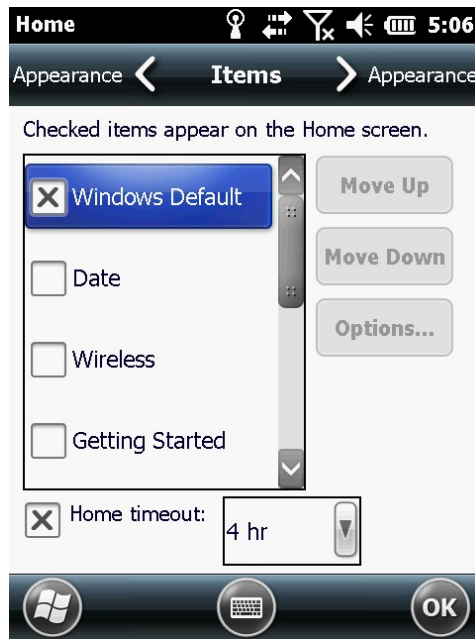 




Figure 26

Select the items to appear on the home screen and the order in which they appear, and then tap “OK”.

4.6.2.3 Set Date and time

There are three methods as follows to open the Clock & Alarms interface:

1. Tap the clock item on the home screen.
2. Tap the title bar and then tap the clock icon  on the pull-down list.
3. Tap  / Settings / Clock & Alarms.

Tap “Time” tab as shown in figure 27.

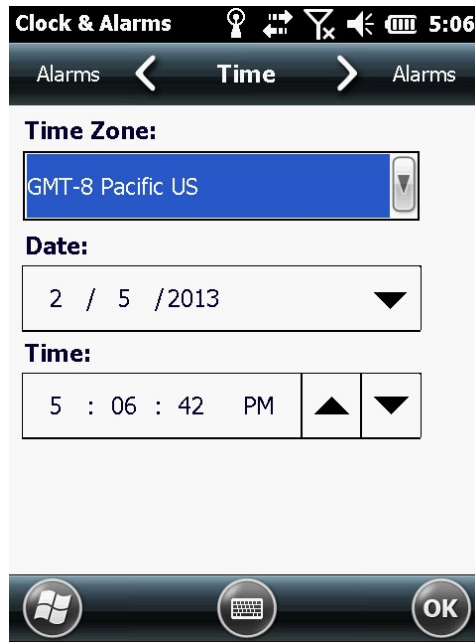 



Figure 27

Set the required hours, minutes, seconds from the drop-down list then.

4.6.3 Screen Lock

Tap the Screen Lock icon  on the Start screen to lock the screen and keypad while the device remains turned on. After that you can see the interface shown as in figure 28.

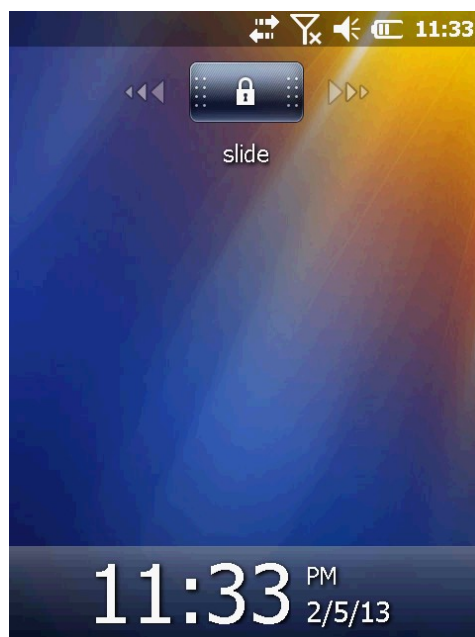 



Figure 28

Slide the unlock icon  to unlock.

4.6.4 Set Passwords

It is possible to keep your data secure by requiring a password each time when the handheld is turned on, tap  / Settings / Lock to set a password or to change password settings, the page shown as in figure 29.

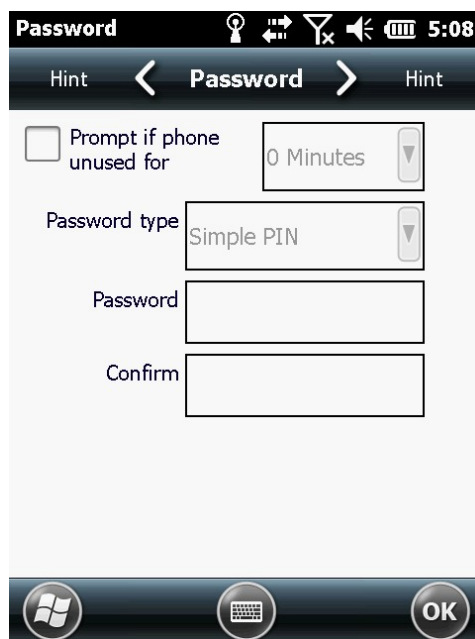 




Figure 29

You can set password and hint by tapping “Password” tab and “Hint” tab.

4.6.5 Power

There are two methods as follows to open the power control:

1. Tap the title bar and then tap the power icon  on the pull-down list.
2. Tap  / Settings/ System/ Power.

You can see the dialog box shown as in figure 30.

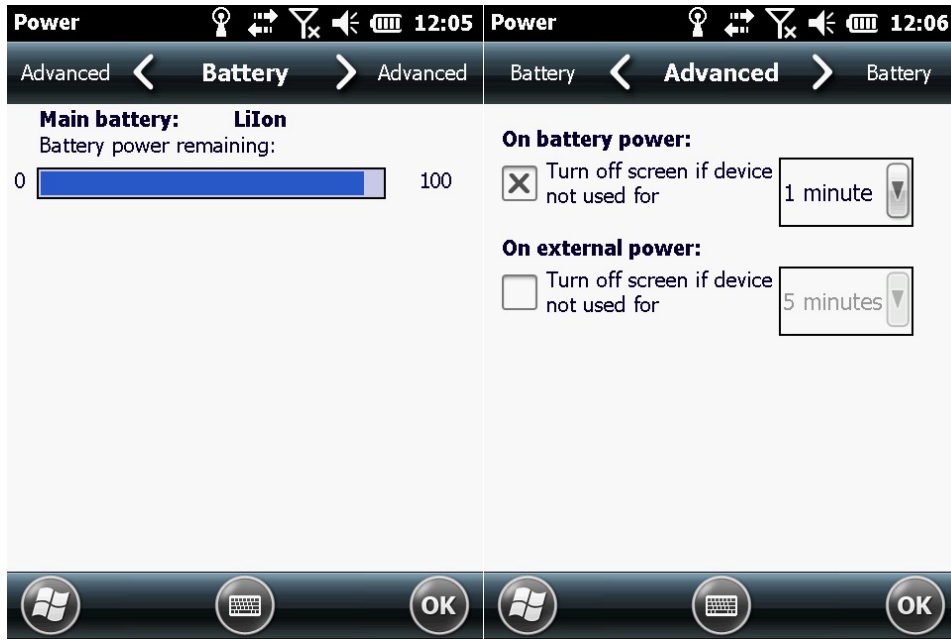 



Figure 30

Figure 31

Tap “Battery” tab to check the battery level. Tap “Advanced” tab shown as in figure 31 to set the time before the device turns off when idle.

4.6.6 Sounds and Notifications

Use the Sounds & Notifications control set preferences for the speaker volume and system sounds.

Tap  Settings/ Sounds & Notifications, tap “Sounds” tab shown as in figure 32 to set the sounds of the event.

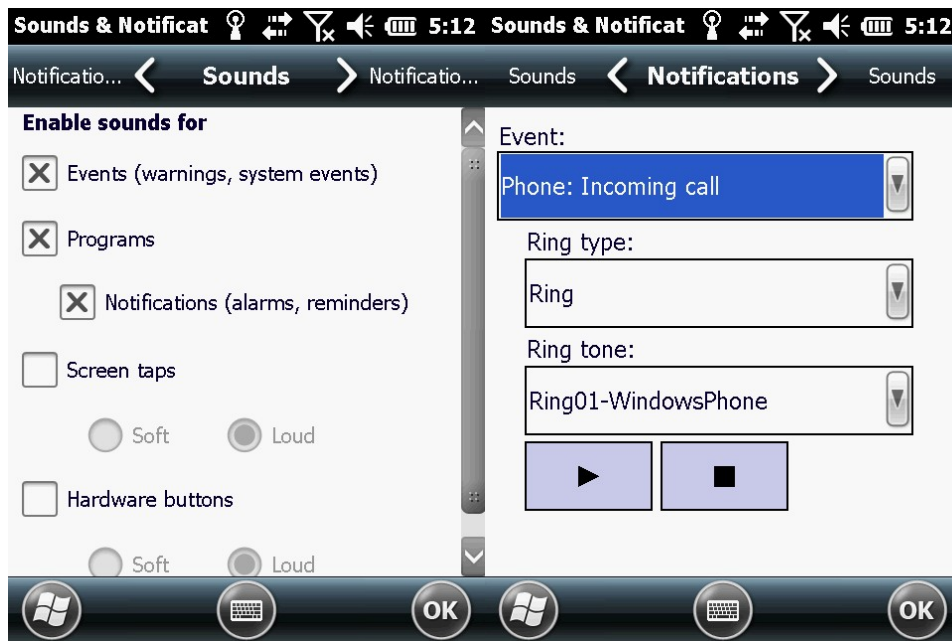 



Figure 32 Figure 33

Tap “Notifications” tab shown as in figure 33 to set the Ring type and Ring tone of the event.

4.6.7 Screen

Use the Screen interface to align the touch screen or to change the appearance of text on the screen.

Tap  Settings/ System/ Screen, tap “General” tab. It’s shown as in figure 34. Select an option in the orientation group to change the screen orientation, and then tap “OK”.

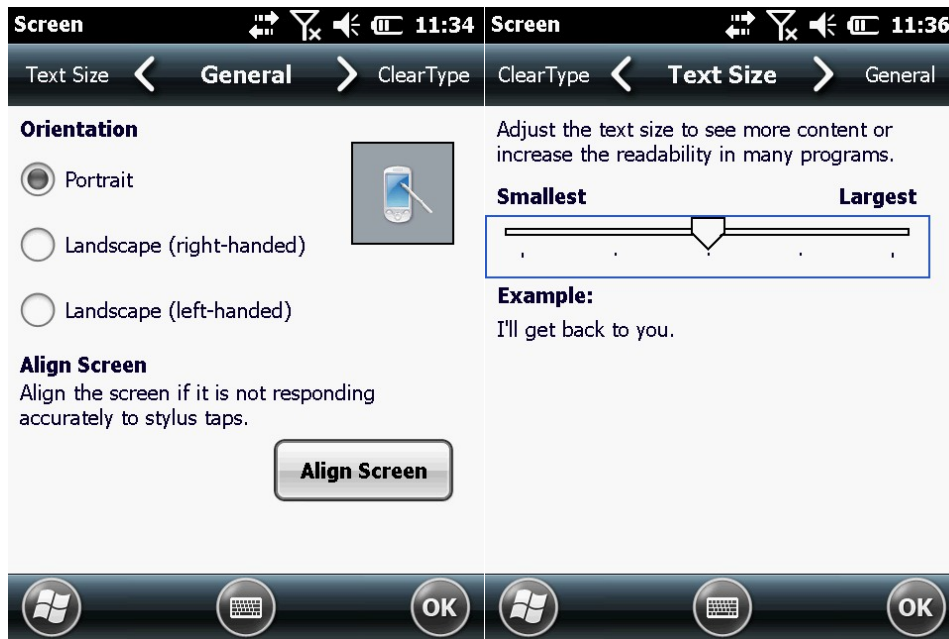 



Figure 34

Figure 35

Tap “Text Size” tab shown as in figure 35 and drag the slider control to change the size of the text, tap “OK”.

4.6.8 Backlight

The backlight makes the screen easier to read in low light but uses extra power. Use the Backlight control to configure power-saving settings for the backlight.

Tap  Settings/ System/ Backlight shown as in figure 36 to set the time before the device turns off the backlight when idle.

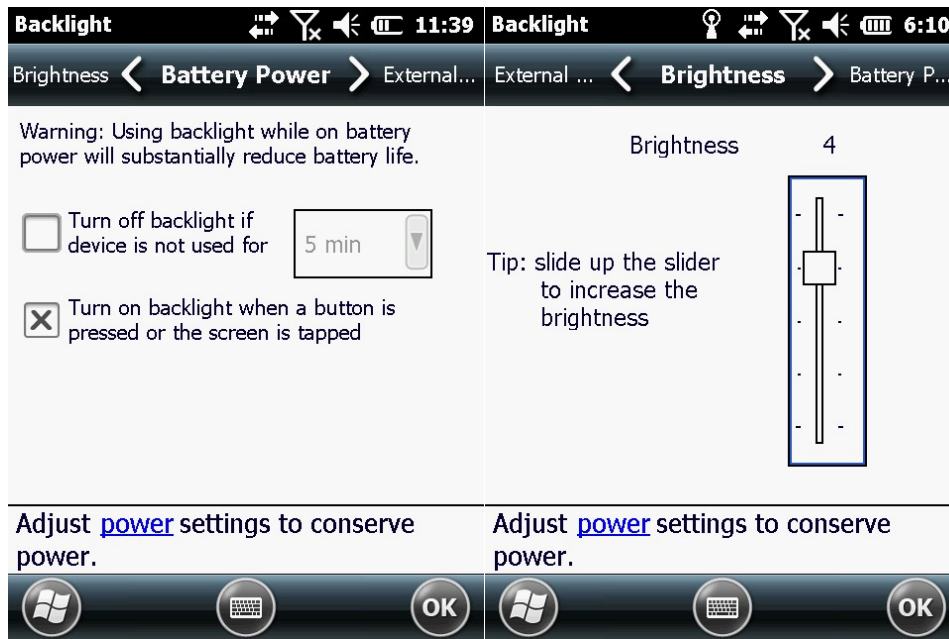 


Figure 36


Figure 37

Unselect “Turn off backlight if device is not used for”, then the device won’t turn off the backlight when idle.

Tap “Brightness” shown as in figure 37 to change the brightness of the device.

4.6.9 Align Screen

Whenever the screen doesn’t respond to the stylus or your finger, you should align the screen.

Tap  Settings/ System/ Screen shown as in figure 38 and tap “Align Screen” tab shown as in figure 39.

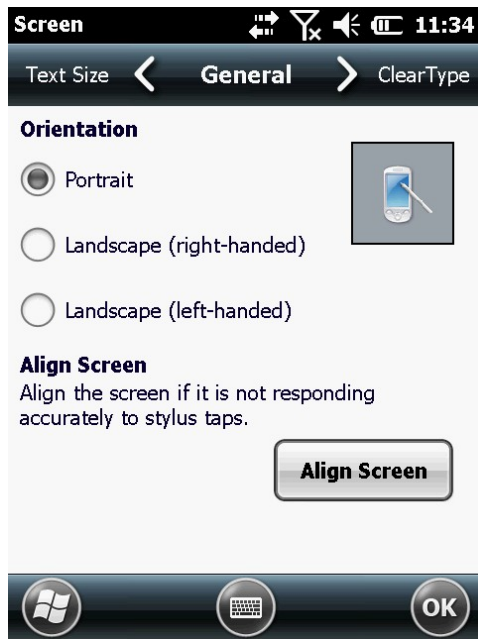 


Figure 38

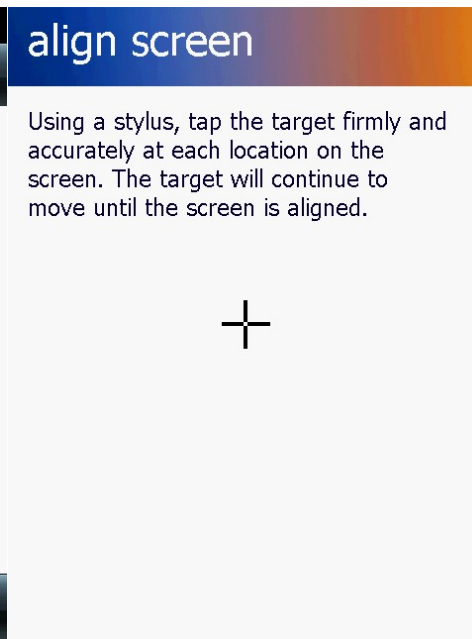 



Figure 39

Tap the target to align the screen, the device will exit the align interface automatic after the screen is aligned.

4.7 GPRS Network Setting

Use GPRS to connect the internet, you can receive and send messages through the network. You need to apply for GPRS Service from your service provider, and you can search the rate of the GPRS provided by the service provider. Please contact with your service provider to specifically know the rate of GPRS and the tariff standard.

4.7.1 Add New GPRS Connecting

1. Tap  Settings/ Connections. It's shown as in figure 40.

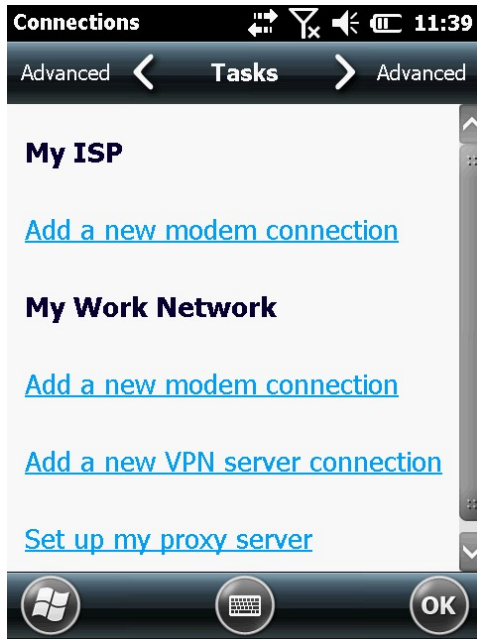 


Figure 40

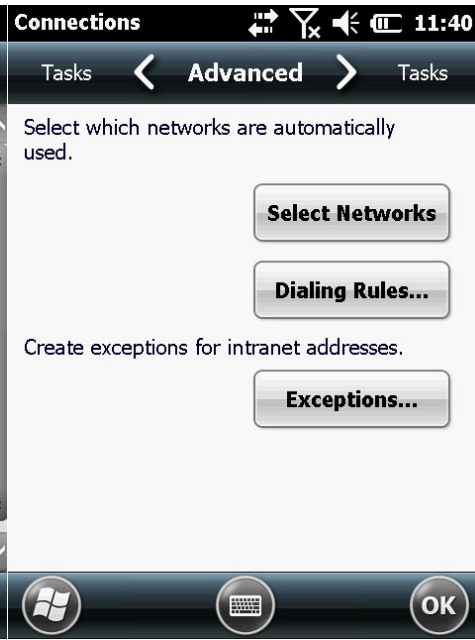 


Figure 41

2. Choose “advanced” as shown in figure 42, tap “select networks” in advanced page. Remarks: if internet had been set, you can turn to step 5.
3. Choose “My ISP” in drop-down box and click “Ok” to return to figure 37 and then click the “tasks” tag in the upside as shown in figure 42.

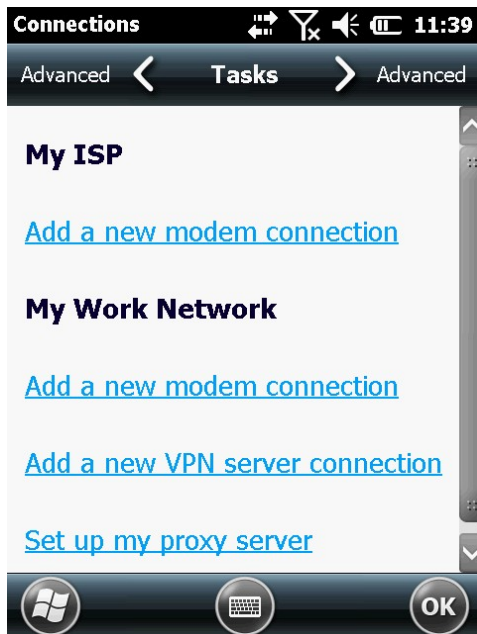 


Figure 42

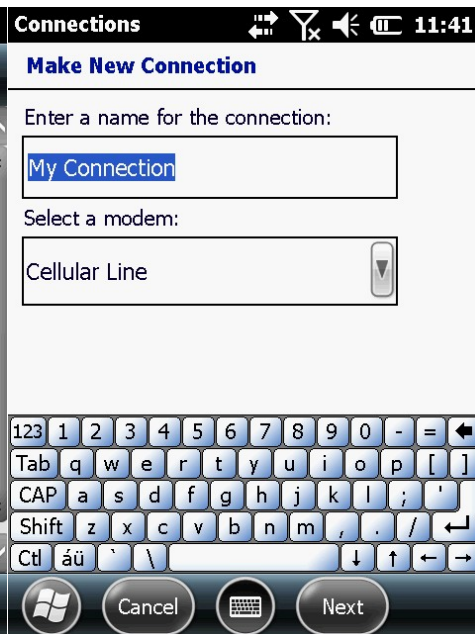 


Figure 43

4. Tap “Add a new modem connection” as shown in figure 43.

5. In “select a modem” choose “cellular line (GPRS)” and then click the next step shown as in figure 44. Input the name of access point “CMNET”.

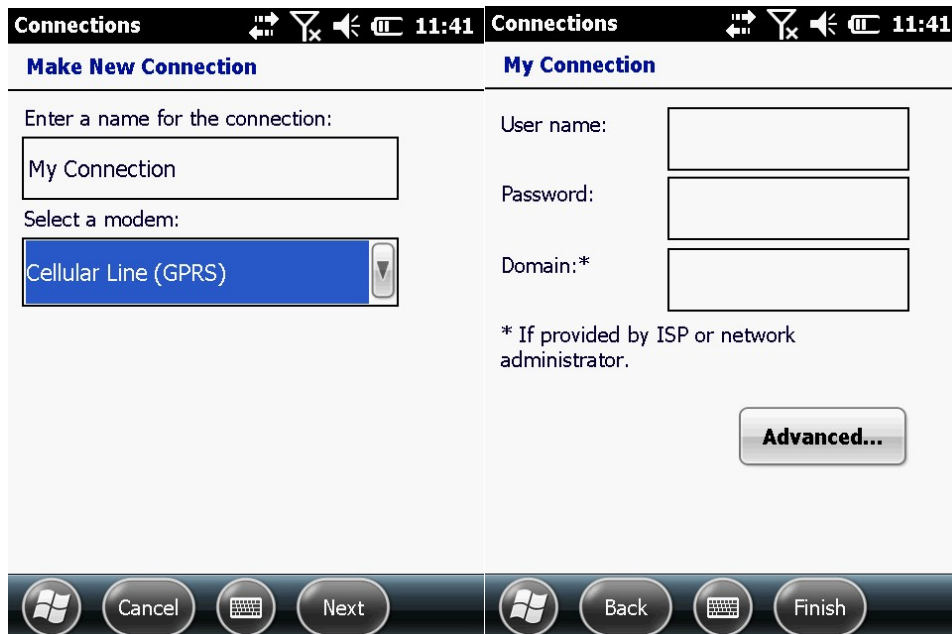 


Figure 44

Figure 45

Tap “Next” as shown in figure 45, it’s not need to fill User name, Password and Domain. Tap “Finish”.

CAUTION: Please confirm GPRS connecting is on and has established connection before you use the GPS to measure.

4.8 Bluetooth Connecting

Tap  Settings/ Bluetooth as shown in figure 46.

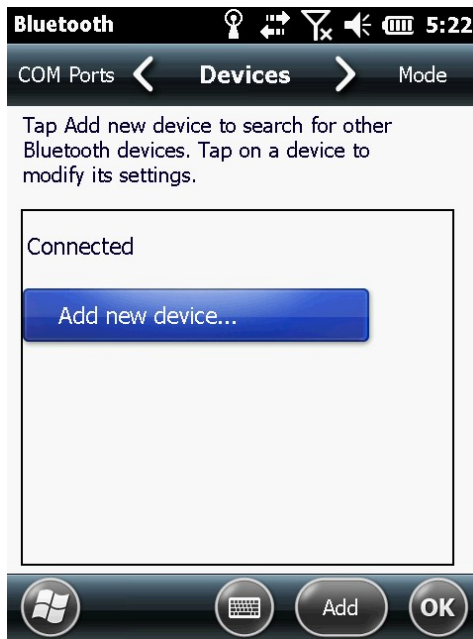 


Figure 46

Tap “Add new device” and select the specified Bluetooth device. Tap “Next” to input password(default password is 1234) as shown in figure 47, tap “Next”, and then tap “OK”.

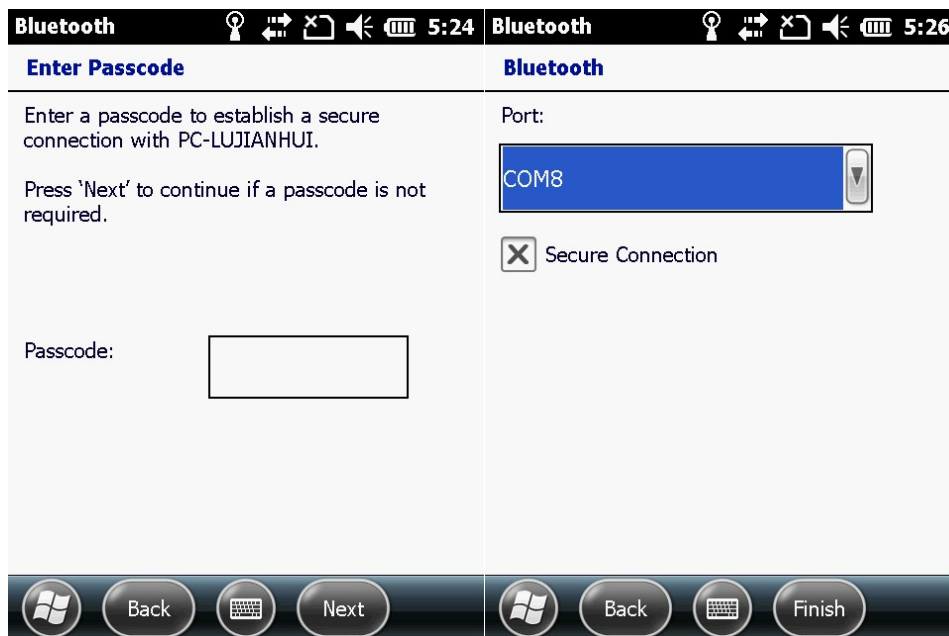 


Figure 47

Figure 48

Back to Bluetooth main screen, select “COM ports”. Choose “New Outgoing Port”. Confirm the device SN and then click “Next”. Choose port(you can use COM0, COM4, COM7,COM8) as show in figure 48, and then “click finish”.

CAUTION: To delete the port matched before when we are using Bluetooth, the right operation method is delete it first in the matching port, and then delete the specific device in the “disconnected”. It will bring inconvenience to use if you do in an improper order.

4.9 Phone and Text Messages (Select Models Only)

4.9.1 Phone

4.9.1.1 About Your Phone



Select models are equipped with the HSDPA (High-Speed Downlink Packet Access) module. HSDPA is an enhanced 3G (third generation) mobile telephony communications protocol. It can operate on 850/900/1800/1900/ 2100MHz.

To use the phone, you need to first set up an account with a mobile phone network service. The functions available to you depend on the services offered by your mobile phone network service provider and your type of subscription.

Your service provider will provide you with a SIM card. This card contains your mobile phone account details and rights, contacts that can be stored and any additional services to which you have subscribed. You must install a SIM card before you can make or receive phone calls or use wireless data services.

4.9.1.1.1 Switching on or off the Phone

When the device is turned on, the phone is switched on by default. When needed (for example, on an airplane), you can switch off the phone without turning off your device.

1. Tap  Settings/ Connections/ Wireless Manager, or tap the tittle bar, tap connectivity indicator  on the pull-down list, and then tap “Wireless Manager”.

2. Appear the screen as shown in figure 49.

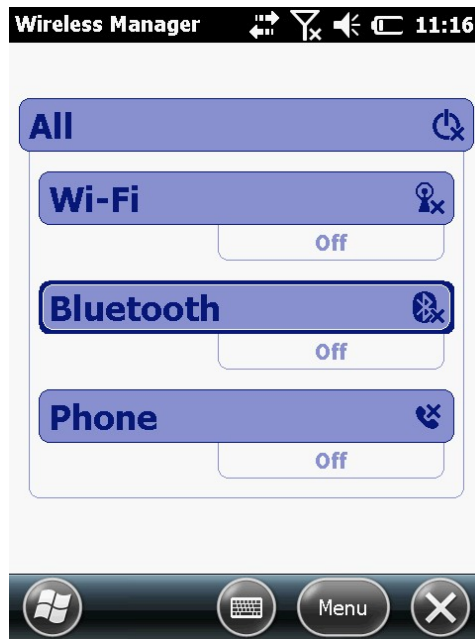 


Figure 49

Tap "Phone" to switch it from off to on.


3. When the phone is switched on, you may be requested to enter the PIN (Personal Identification Number) code if it has been set.

Then, your device will search for the mobile phone network service and show the name in the Wireless Manager section on the Today screen.

Tap "Phone" again if you want to turn it off, then the Phone section displays Phone off.

4.9.1.1.2 Starting the Phone Program

Start the Phone program by any of the three methods:

1. Press the Send key on the device.
2. Tap Phone (left soft key) on the Today screen.
3. Tap  Phone.

CAUTION: if the phone is currently off, you will be asked to turn it on.








 



 


Whenever you start Phone, the Phone screen displays the soft keypad. You can

tap Hide Keypad (left soft key).

You can use other programs during a call. To quickly switch back to Phone, press the Send key on your device.

4.9.1.1.3 Phone Status Icons

Icons will be displayed on the navigation bar to indicate the status of the phone functions. They are listed below:

| Icon | Meaning | Icon | Meaning |
|---|---------------------------|---|----------------------|
|  | Phone off (airplane mode) |  | EDGE available |
|  | Signal strength |  | WCDMA/UMTS available |
|  | Call in progress |  | WCDMA/UMTS in use |
|  | Missed call |  | HSPA available |
|  | Call on hold |  | HSPA in use |
|  | GPRS available |  | Missing SIM card |
|  | GPRS in use |  | EDGE in use |

4.9.1.2 Making a Call

4.9.1.2.1 Dialing a Call

1. When on the Today screen: Press the numeric keys on your device to start entering the phone number. Your device will automatically switch to the Phone program.

While in the Phone program: Enter the phone number using the physical or onscreen keypad.

2. As you enter the phone number, the program searches Contacts, Call History, and Speed Dial to find a matching name and/or number. When you see the name of the person to call listed, you can directly select the desired phone number.

Or, you can continue entering the complete phone number.

3. Press the Send key on your device to make the call.

CAUTION:

If you enter a wrong number, use the Backspace key to eraser individual numbers one at a time.

If you are making an international call, tap and hold on the number key 0 until + sign appears. The + sign replaces the international prefix of the country from where you are calling.

4.9.1.2.2 Making a Call From the Onscreen List

Whenever you start the Phone program, the screen lists all recent calls, speed dials, and contacts.

If the list contains the number you want to call, you can conveniently select from the list and press the Send key on your device.

CAUTION: To view a different list on the phone screen, tap menu/ view and select one of the options.

4.9.1.2.3 Making a Call From Contacts

Microsoft Contacts displays your contact information stored both in your device's memory and on your SIM card.

1. Start the Contacts program.

2. Do one of the followings to call a person in the contact list:

① Tap the contact to call. Then tap the number to call; or move to the number to call and then tap Call or press the Send key.

② Tap and hold on the contact to call, and then tap the number to call in the shortcut menu.

4.9.1.2.4 Making a Call From the Call History List

The Call History list displays the calls you made, received or missed.

1. While in the Phone program, tap “Call History”.

If have hidden the keypad, tap Keypad to see the Call History key.

2. Do one of the followings to call a person in the Call History list:

① Select the number to call and then tap “Call” or press the Send key on your device.

② Tap and hold on the number to call and then tap “Call” in the shortcut menu.

4.9.1.2.5 Making a Call From Speed Dial

If you have created speed dial entries, you can call a person quickly.

When on the Today screen or in the Phone program, press and hold the numeric key of the assigned speed dial number to make the call.

4.9.1.3 Responding to a Call

When an incoming call is received, your device rings or vibrates according to the options you have set for the phone. The name and number of the caller are displayed on the pop-up window. If the name of the caller is not in your contact list, only the caller’s phone number is displayed.

4.9.1.3.1 Answering a Call

To answer an incoming call, press the Send key on your device or tap Answer (left soft key).

4.9.1.3.2 Rejecting a Call


To reject an incoming call, press the End key on your device or tap Ignore (right soft key).

4.9.1.3.3 Ending a Call

To end a call, press the End key on your device or tap End on the screen.


4.9.1.4 Operations During a Call

4.9.1.4.1 Adjusting the Phone Volume

To adjust the volume during a call, tap the  icon on the navigation bar and select a volume level.

4.9.1.4.2 Using the Mute Function

During a call, you can mute your microphone so that the person with whom you are speaking cannot hear you, but you can still hear him or her.

On the Phone keypad, tap “Mute” to switch on the mute function. The icon will appear  on the upper-right corner. To switch off the mute function, tap “Unmute”.

4.9.1.4.3 Using the Speakerphone

Tap “Speaker” On to switch on the speakerphone function. The icon will appear on the navigation bar.

To switch off the speakerphone function, tap “Speaker Off”.

4.9.1.4.4 Managing More Than One Call

CAUTION: You may need to register for the “call waiting” service with your mobile phone network service and set your device accordingly. The exact number of people you can talk at the same time depends on your mobile phone network service.

During a call, you can make or take a second call while putting the current call on hold. Then, you can choose to swap between the two callers or set up a

conference call between all three parties.

Holding a Call to Take a Second Call

1. If there is another incoming call when you are talking on your device, a pop-up window appears to notify you.
2. Tap “Answer” to place the first call on hold, and answer the second call.
3. To end the second call and go back to the first, tap “End”.

Rejecting the Second Call

To reject the second call and keep your current call in progress, tap Ignore. Be careful not to tap End; doing so will end the current call.

Placing a Call on Hold to Make a Second Call

1. During a call, tap “Hold” to place the first call on hold.
2. Dial a second number or the first few letters of the second contact’s name by using the numeric keypad on your device. Then press the Send key to connect. Wait for it to be picked up.
3. To end the second call and go back to the first, tap “End”.

Swapping Between Calls

When you have put a call on hold and made or taken another call as described earlier, you can swap between the two calls by tapping “Swap”.

Setting up a Conference Call

CAUTION: You may need to consult your mobile phone network service for the availability and subscription of the conference call function.

1. When you have put a call on hold and made or taken another call as described earlier, you can set up conference calling by tapping Menu/ Conference.
2. To add additional people to your conference, tap Hold. Dial a second number

and press the Send key to connect. Wait for it to be picked up. Then tap Menu/Conference.


3. If you want to talk to one of the parties privately during the call, tap Menu/Private. Select a number, and tap “Private”.

4.9.1.4.5 Taking a Note During a Call

You can take a note during a call.

1. Tap “Notes”.
2. Enter your note and tap “ok”.

To access a note you created during a call:

1. While in the Phone program, tap “Call History”.
2. The  icon indicates that the phone call entry contains a note. Tap and hold the name or number for that entry, and tap “View Note” in the shortcut menu.

CAUTION: You can also tap “Programs”, “Notes”, and access the note in the Calls folder.

4.9.1.5 Using Call History

Call History provides the time and duration of all incoming, outgoing, and missed calls, and a summary of total calls. Call History also provides easy access to any notes taken during a call.

To access Call History while in the Phone program, tap “Call History”.

4.9.1.5.1 Viewing Call History

You can tap Menu/ Filter to change the Call History view (All Calls by default).

All Calls: Displays all calls made to and from your device in a chronological order.

Missed: Displays only calls that were not answered.

Outgoing: Displays only calls made from your device.

Incoming: Displays only calls made to your device.

To see the time, date and duration of a call, tap the item on the list to view details.

To clear all items on the list, tap Menu/ Delete All Calls.

4.9.1.5.2 Adding an Entry to Contacts Using Call History

You can add a phone number in the Call History to Outlook Contacts or SIM Contact.

1. Tap and hold the entry you wish to transfer, and tap Save to Contacts in the shortcut menu.
2. Tap New Contact and select a contact type.
3. Enter the contact's name, and select the proper number type.

Using the Phone is selected Models Only.

4. Tap "Save" to save the entry.

4.9.1.6 Using Speed Dial

You can create Speed Dials for frequently-called phone numbers so you can dial a number with a single key press.

4.9.1.6.1 Creating a Speed Dial Entry

Speed dials can only be created for numbers stored in Contacts.

1. While in the Phone program, tap "Speed Dial".
2. Tap Menu/ New.
3. Tap the desired contact.
4. In Name, accept the current name or change it if you want to.

5. In Number, select the phone number if there is more than one number for the contact.

6. If Location, accept the current speed dial number or change the number if you want to.

7. Tap “ok” to save the setting.

The new Speed Dial entry is now on the Speed Dial list. The letter on the lower-right corner of the entry indicates the assigned phone number. For example, “m” indicates the mobile phone number.

4.9.1.6.2 Editing or Deleting a Speed Dial Entry

1. While in the Phone program, tap “Speed Dial”.

2. Tap the desired entry and tap Delete or Tap and hold on the desired entry, and tap “Delete” in the shortcut menu. (Select Models Only)

3. Tap “Yes”.

4.9.1.7 Customizing Your Phone

To access the Phone Settings, start the Phone program and tap Menu/ Options.

4.9.1.7.1 Changing Phone Settings

Tap “Phone” tab.

You can customize phone settings, such as the ring type and ring tone to be used for incoming calls, and the keypad tone to be used when entering phone numbers.

CAUTION: To use custom .mp3, .wav or .mid files as ring tones for incoming calls, copy the files to the Application data/ Sounds folder on your device or to the inserted storage card. Then, select the sound from the Ring Tone list.

4.9.1.7.2 Changing Security Settings

Tap “Security” tab.

You can protect your phone from unauthorized use.

You might be prompted to enter the PIN2 code for specific functions (such as the pre-paid card’s charging counters). Consult your mobile phone network service to check if your SIM card supports PIN2-related functions and services.

CAUTION: Emergency call can be placed at any time without requiring a PIN code.

4.9.1.7.3 Changing Services Settings

Tap “Services” tab.

You can set up the services you are applying for through the mobile phone network services. For example, you may want to block certain types of incoming and/or outgoing calls, forward incoming calls to a different phone number based on your situation, be notified of incoming calls when you are already in a call, or let others know your identity when making calls. Services available to you depend on your mobile phone network service and the type of your subscription.

To view your services settings, tap a service and then tap “Get Settings”.

4.9.1.7.4 Changing Network Settings

Tap “Network” tab.

You can view available wireless networks, determine the order in which your phone accesses another network if the current one is unavailable, and specify whether you want to change networks manually or automatically. The current network will remain active until you change it, lose your signal, or change your SIM card.

4.9.1.8 Additional Phone Operations

4.9.1.8.1 Using Text Messages

Text messages are automatically received when your phone is switched on. The Today screen shows if there are new text messages. You can tap the section to open the message list.

To send a text message, you can do one of the followings:

- ① Select a phone number from a program such as Phone or Contacts at first. Then select “Send Text Message” from the shortcut menu or soft key.
- ② Start the Messaging program at first. Then select the phone number.

4.9.1.8.2 Setting up an Internet Connection

You can set up an Internet connection using the mobile network.

4.9.1.8.3 Checking Your Voice Mail

The first position in your speed dial list defaults as your voice mailbox. When you insert your SIM card, your device automatically detects your voice mailbox number and sets it to the first position in your speed dial list.

4.9.1.8.4 Making an Emergency Call

You can use your device to dial the international emergency number 112. This number can normally be used to make an emergency call in any country with or without a SIM card inserted, as long as you are within a mobile phone network.

Some mobile phone network services may require that a SIM card be inserted, and in some cases that the PIN be entered.

There may be other emergency numbers available. Your mobile phone network service may save additional local emergency numbers in the SIM card.

4.9.1.8.5 Dialing an International Call

When you are manually dialing a number, tap and hold on the number key 0 until the + sign appears. The + sign replaces the international prefix of the country from where you are calling.


Enter the full phone number you want to dial including country code, area code (without the leading area code zero) and local phone number.

4.9.2 Text Messages


4.9.2.1 Reading Text Messages

Text messages are automatically received when your phone is switched on. The Today screen shows if there are new text messages. You can tap the section to open the message list.

To manually open the message list:

1. Tap  Text.
2. The message list appears. Select the item you want to read.

4.9.2.2 Composing and Sending a Text Message

1. Tap  Text.
2. Tap Menu/ New.

CAUTION: You can also send a text message by selecting a phone number from another program such as Contacts or Phone. Then select “Send text message” from the shortcut menu or soft key.

3. Enter the phone number of one or more recipients, separating them with a semicolon.

To select phone numbers from Contacts, tap “To”.

4. Enter your message.

To quickly add common messages, tap Menu/ My Text, and tap a desired message.

5. Tap “Send”.

4.10 WIFI Connecting

4.10.1 Switching On or Off the Wi-Fi Radio

By default, the Wi-Fi radio is switched off. To switch on or off the Wi-Fi radio:

1. Tap the Wireless Manager section on the Today screen or tap the connectivity indicator on the navigation bar and tap “Wireless Manager”.
2. In the Wireless Manager screen, tap Wi-Fi to change the Wi-Fi radio status.

When switched on, your device will display the word Available if wireless networks are detected.

If you have previously connected to a wireless network, your device will try to connect to the same network and display the name of the network after the connection.


4.10.2 Connecting to a Wireless Network


1. Switch on the Wi-Fi radio. (See ,Switching On or Off the Wi-Fi Radio previously.)
2. Your device will detect available Wi-Fi networks.


If more than one network is detected, the screen will display a network list. Select the network you want to connect to, and tap “OK”.

3. Select to connect to the Internet or the private network, and then tap “Connect”.

4. If the selected network requires a network key, enter the key and tap “Connect”.

The WIFI icon  appears on the navigation bar.

CAUTION: You can also search for a network to connect by tapping  Settings/ Connections/ Wi-Fi.

Once you have connected to a network, the shortcut is created in Settings. Tap  Settings/ Connections/ Wi-Fi to change the network settings. Tap the desired network and change the settings.

5. When you have finished using the wireless network, end the Wi-Fi connection by switching off its radio.

CAUTION: Leaving the radio on will consume more power.

Chapter 5 Software Operation


You can install programs you need on the device except Pre-installed programs.

5.1 Installing Programs

1. Download the programs you need or copy them directly from the CD to your computer.
2. Connect your device and computer, and copy the installation program to your device when you have established the connection between your device and your computer. Find the program you want in the File Explorer and run it. Install the program following the instruction and select the installation path customizing. The system will automatically generate a shortcut when the installation has successfully completed. Click the shortcut to run the program.

CAUTION: If the system prompts to restart the device when the installation has successfully completed, follow the prompts.

5.2 Uninstalling Programs


Tap  Settings/ System/ Remove Programs and select the program you want to uninstall, tap “Remove” to accomplish the operation.


Chapter 6 Troubleshooting and Maintenance

This chapter gives solutions to common device problems you may encounter. It also provides guidelines on taking care of your device.

If you have any questions, please contact with technical personnel.

6.1 Troubleshooting

| Problem | Solution |
|--|---|
| Power does not switch on when using battery power. | The remaining battery power may be too low to run your device. Charge the battery. |
| Screen responds slowly. | Make sure that your device is not running out of battery power. If the problem still persists, restart your device. |
| Screen freezes. | Restart your device. |
| Cannot establish a connection with a computer via USB. | Make sure that your device and your computer are both switched on before trying to establish a connection. |
| | Make sure that the cable is securely plugged into the USB port on your computer and on your device. Connect the USB cable directly to your computer—do not run the cable through a USB hub. |
| | Restart your device before connecting the cable. Always disconnect your device before you restart your computer. |
| A warning message of not enough memory appears. | In some specific cases, your device may experience connection problems when it is connected to a Windows computer running ActiveSync. To resolve the problems, please tap  Settings/ Connections/ USB to PC, and then clear “Enable advanced network” functionality. |
| | Delete files you no longer need. |
| | Remove programs you no longer need. Delete all files and clear history in Internet Explorer. |

| | |
|--|---|
| | <p>Stop programs you are not currently using. To check the state of your active programs, tap  Settings/ System/ Task Manager.</p> <p>Restart your device.</p> |
|--|---|

6.2 Resetting Your Device

In some cases, you may need to restore your device to the factory default state by clearing the memory. For example, you should clear the memory when the device can't be turned off, start or when you forget your password.

Clearing the memory means all data you have entered in your device's memory, including all files, system settings and additional programs you have installed, will be erased. (Programs installed to ROM at the factory are not affected.)

CAUTION: To ensure the integrity of your data, it should be necessary to clear the memory, you are advised to regularly back up your data.

You can do one of the followings to upgrade:

1. Please consult the aftermarket Technical support or factory technician to ensure the upgrade files are correct and latest.
2. Upgrade BOOT: Press and hold the power button, number keys 4 and 7 when your device is off until the screen appears upgrade BOOT. Restart your device when the upgrade has successfully completed.
3. Upgrade OS: Press and hold the Power button, number key 4 and "*" until the screen appears upgrade OS. The upgrade process takes a few minutes, please be patient.

6.3 Caring for Your Device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage to your device.

Keep your device away from extreme temperatures and excessive moisture.

Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.

Do not place anything on top of your device or drop objects on your device.

Never privately attempt to disassemble, repair or make any modifications to your device.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your device, its parts or accessories.

Appendix 1: Specifications

| Model | 1000P |
|-------------------------------|---|
| Physical specification | |
| Operation System | Windows Mobile6.5 |
| Processor | TI Sitara™ AM335x 1GHz |
| ROM | ROM 8G (up to 32G) SD expansion to 32G |
| Weight | 925g(with internal battery) |
| Size | 193*91*42mm |
| Camera | 5M pixel autofocus camera |
| Button | Full digital versatile physical keyboard |
| Display | |
| Screen | Blanview screen |
| Resolution | 480×640VGA |
| Screen size | 3.7 inch |
| Communication | |
| Wireless | 802 11b/g wireless WLAN |
| Bluetooth device | 2.1+EDR version |
| Communication module | Built-in universal quad-band communication module Voice calls and multimedia messaging |
| Protocol | Support RTCM 2.3, differential NMEA 0183 UBX binary, u-blox proprietary |
| Operating environment | |
| Waterproof/Dustproof | IP67 |
| Operating temperature | -30℃ to +60℃ |
| Storage temperature | -30℃ to +70℃ |
| Humidity | 5% -95% non-condensing |
| Drop | Withstands 1.2m free drop onto hard surface |
| Receiver | |
| Satellite System | GPS: L1C/A SBAS: L1C/A QZSS: L1 C/A GLONASS: L1 OF BeiDou: B1 |
| Channels | 72 |
| Accuracy | Velocity accuracy: 0.05 m/s Heading accuracy: 0.3 degrees Position accuracy: 2.5 m |
| Max navigation update rate | 5HZ |